



SLOPE-PURE

SLS Type

Major Applications

Pigment-based inkjet ink

Various high-concentration dispersions

Industrial water, Pure water

Chemicals

Beverages


Features

- Depth filter structure with wide filtration grade slope
- Variety of micron ratings
- 100% Polypropylene
- No use of binder or surfactant

Advantages

- Long service life for high-concentration dispersion with a wide particle size distribution
- Optimal micron ratings selection according to the purpose
- Wide range of fluid compatibility
- Low extractables risk

Structure

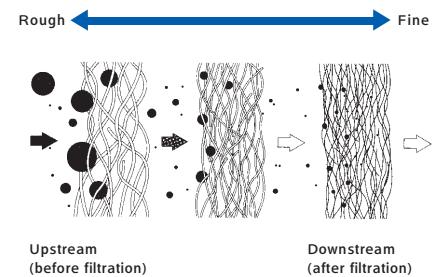

Specifications


Grades		005	010	020	030	050	070	100	150	200	300	400	500	700	900	12H	15H
Micron Ratings (μm)		0.5	1.0	2.0	3.0	5.0	7.0	10	15	20	30	40	50	70	90	120	150
Materials	Media	Polypropylene															
	Core	Polypropylene															
	End Cap	Polypropylene (for F, 0, 5, 7)															
Maximum ΔP		0.49MPa at 20°C (71psi at 68°F)															
Maximum Operating Temp		60°C (140°F) *for End Cap Code PZ only / 80 °C (176°F)															
Dimensions	Length	125 / 250 / 500 / 750 mm															
	O.D.	66.0 (for CZ) / 70.0 (for PZ, F, 0, 5, 7) mm															
	I.D.	25.5 (for PZ) / 25.6 (for 0, 5) / 26.1 (for F) / 29.5 (for CZ, 7) mm															
Adaptable Food Sanitation Standard		All raw materials meet the requirement of FDA 21 CFR *1															

*If you need further information on specifications (length, end cap type, etc.), please contact us.

*1 Applicable Gaskets and O-ring materials exclude EPDM.

Differential Pressure vs Flow Rate

Fluid: Refined Water 20°C (68°F) / Cartridge Length: 250mm

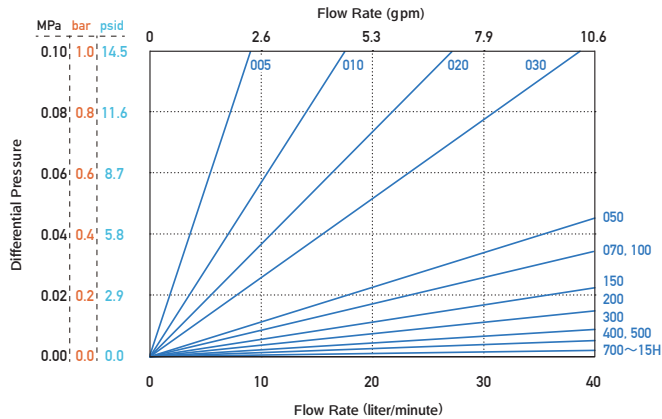

Particle Removal Efficiency

Particle Size (μm)	005	010	020	030	050	070	100	150	200	300	400	500	700	900	12H	15H
0.5	> 98															
1.0	> 99.9	> 99.9	> 98													
2.0			> 99.9	> 98												
3.0				> 99.9	> 99.9	> 98										
5.0					> 99.9	> 98										
7.0						> 99.9	> 99.9	> 98								
10							> 99.9	> 98								
15								> 98								
20								> 99.9	> 99.9	> 98						
30									> 99.9	> 98						
50										> 99.9	> 98	> 98				
70											> 99.9		> 98			
90												> 99.9	> 99.9			


Test Conditions

Equipment : Liquid Particle Counter
Filtration : Single Pass
Fluid : Refined Water
Flow Rate : 10 liter/minute
Dust : ACFTD + LATEX Beads (SLS-005~400)
 Diatomaceous earth (SLS-500~15H)

Ordering Information

Length	Product Type	Micron Rating	Gasket/O-Ring	End Cap Code	Packaging Code
2 5 0 L	-SLS-	1 0 0	P	Z	F
125 = 125 mm 250 = 250 mm 500 = 500 mm 750 = 750 mm		005 = 0.5 μm 200 = 20 μm 010 = 1.0 μm 300 = 30 μm 020 = 2.0 μm 400 = 40 μm 030 = 3.0 μm 500 = 50 μm 050 = 5.0 μm 700 = 70 μm 070 = 7.0 μm 900 = 90 μm 100 = 10 μm 12H = 120 μm 150 = 15 μm 15H = 150 μm	C = No sealing P = Foamed polyethylene S = Silicone E = EPDM N = NBR V = FKM T = FEP Encapsulated FKM (for 0, 5, 7) PTFE (for F)	Z = For P and C F = Flat Gaskets 0 = 2-222 O-Ring 5 = 2-222 O-Ring + Fin 7 = 2-226 O-Ring + Fin	B = 6pcs C = 10pcs F = 25pcs

End Cap Code

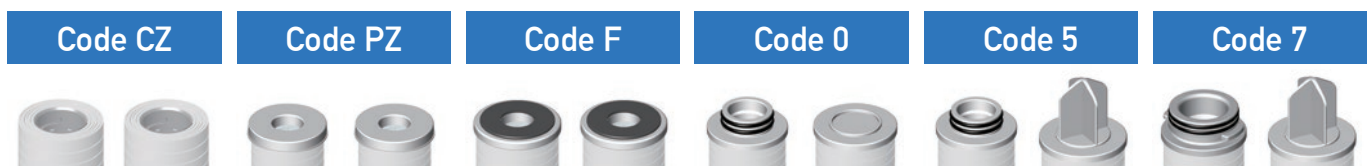

*The contents of the catalog are subject to change without notice.

*The performance data listed in the catalog are Typical values obtained under specific conditions based on our tests.

ROKITECHNO MIRAI CO., LTD.

6-20-12, Minami-Oi, Shinagawa-ku Tokyo, 140-0013 Japan

TEL: +81-3-5764-1131 FAX: +81-3-5764-0681

www.rotechno.com

For our technical information, please click here. ▼



Manufacturing is based on our Quality Management Systems that meet ISO9001 standards.

Scope

Design, Development, manufacture, and sales of filter cartridges, housings and filtration equipment.



25th Issue
SLS200720E